The KRONOBag®




Best TiO₂-packing ever.

Sustainable and easy to handle.

The KRONOBag is a new innovative Big Bag for packaging titanium dioxide. Designed and developed by KRONOS to fulfil customers' needs.

The versatility of the bag, combined with its technical features, its easy handling and its contribution in terms of safety, will deliver various benefits to our customers:

- ★ Premium quality packaging
- ★ Easy handling
- Sustainability

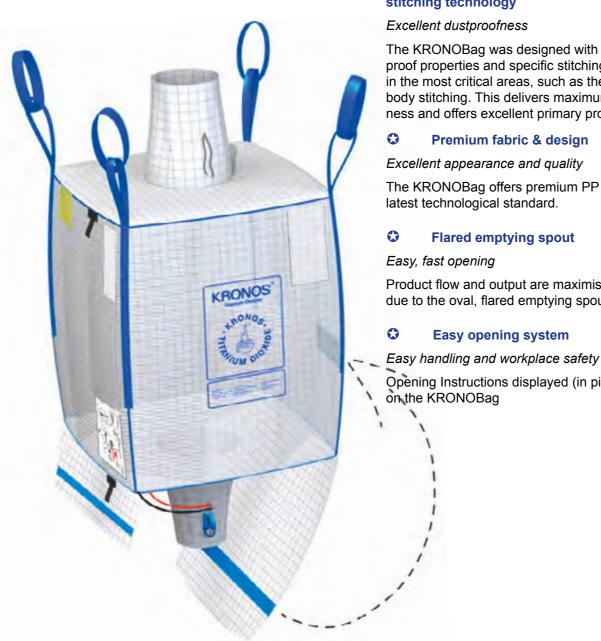

Multi-filament loop-in-loop system

Easy to handle - Great flexibility -Excellent processing

The loop-in-loop design offers the flexibility to process the bag in various emptying devices that may require different heights.

The KRONOBag is equipped with 4 corner loops made of particularly soft, multi-filament material. The loops display excellent stability, offer maximum safety (6-1) and combine that with great processing flexibility.

Smooth, dustproof seams & umbrella stitching technology

The KRONOBag was designed with premium dustproof properties and specific stitching technologies in the most critical areas, such as the top deck / body stitching. This delivers maximum leakproofness and offers excellent primary protection.

Premium fabric & design

Excellent appearance and quality

The KRONOBag offers premium PP fabric to the

Product flow and output are maximised, due to the oval, flared emptying spout.

Opening Instructions displayed (in pictures)

Rectangular bag with reinforced corners

Extra stability on pallet



The bag design includes a new corner stabiliser. As a result, safer transport is achieved as well as an increased stacking height (depending on the product up to three pallets high).

Sustainable packaging

Reusability - Recycling

A trip counter will be printed on the back of the Producer Label of our new FIBC.

We offer a free collection service for our "multi-trip" KRONOBag.


② Bottom flap fixed by Velcro[®] tape

Easy to open


The bottom flap, which protects the emptying spout and ensures easy opening of our KRONOBag, is fixed by a Velcro[®] strip. The flap protects the opening system and avoids contamination.



Opening instructions

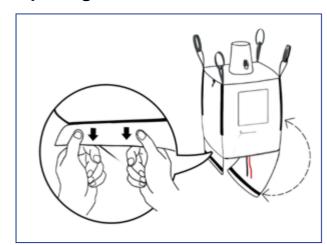

Pull the overlapping fabric to open the Velcro® at the left side of the FIBC. The bottom flap will open to the right side.

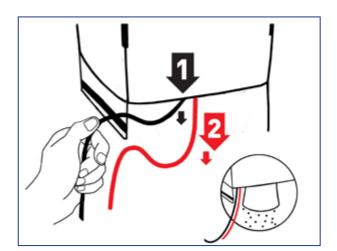

By opening the bottom flap, a black and a red tie will show up.

IMPORTANT:

FIRST pull the BLACK tie to open the safety knot and unlock the B-Lock. THEN pull the RED tie to open the B-Lock.

KRONOS KRONOS TiO, Technology



Your contacts in North America



Technical Service Cranbury, USA +1 609 860-6200



Customer Service Houston, USA +1 281 423-3300

Your contacts in Europe



Technical Service Leverkusen, Germany Leverkusen, Germany +49 214 356-0



Customer Service +49 214 356-0





KRONOS INTERNATIONAL, Inc.

Peschstr. 5 · 51373 Leverkusen · Germany Tel. +49 214 356-0

KRONOS, Inc.

5 Cedarbrook Drive, STE 2 Cranbury, NJ 08512 · USA Tel.: + 1 609 860-6200 kronos.marketing@kronosww.com



This is the link to www.kronobag.com

www.kronostio2.com

The information in this publication is, to the best of our knowledge, true and accurate, but since the conditions of use are beyond our control, no warranty is given or to be implied in respect of such information. In every case, caution must be exercised to avoid violation or infringement of statutory obligations and any rights belonging to a third party. We are, at all times, willing to study customers' specific outlets involving our products in order to enable their most